

Alarm User Guide



FEATURES FOR EACH ARMING MODE					
Arming Mode	FUNCTION	Exit Delay	Entry Delay	Perimeter Armed	Interior Armed
 AWAY	Press to arm when no one is staying on the premises. When armed in AWAY , the system sounds an alarm if a protected door or window is opened, or if any movement is detected inside the premises.	Yes	Yes	Yes	Yes
 STAY	Press to arm when you are staying home, but might expect someone to use the entrance door later. When armed in STAY , the system sounds an alarm if a protected door or window is opened, but you may otherwise move freely throughout the premises.	Yes	Yes	Yes	No
 NIGHT	Press to arm when you are staying home and do not expect anyone to use the entrance door. <i>Your installer may have configured NIGHT Mode differently; have the installer describe the actual settings of this mode.</i>	Yes	Yes (set for Away or Stay Mode) No (set for Instant or Maximum Mode)	Yes	Yes (set for Away or Maximum Mode) No (set for Stay or Instant Mode)

How to Add a User

ICON	ACTION	NOTES
	1. From the "Home" screen, press the Setup icon.	On the Data Entry screen, enter the user information. <ul style="list-style-type: none"> Use the Shift key for capital letters Use the BS (Backspace) key to make corrections. The @#& key is not available for use at this time. These characters cannot be saved to the control panel. The authorized code for adding users is dependent upon the alarm panel you are interfacing with. Check your alarm panel Installation and Setup Guide to determine who can add users. If assigning this user to wireless key, enter one of the zone numbers of the keyfob (the wireless key must be programmed first before it can be assigned to a user). Select the partitions, access level, and enter an available user number for this user. Available user numbers: For Residential enter a number from 002-049. For Commercial enter a number from 002-250.
	2. Press the System Setup icon.	
	3. Press the USER SETUP icon.	
	4. Press the ADD USER icon and enter your Authorized Code.	
	5. Press the box next to Enter User Name .	
	6. Type in the user name (6 characters max.; no spaces between characters) and press the OK icon.	
	7. Press the box next to User Number and enter an "available" (3-digit) user number; press the OK icon.	
	8. Press the box next to Enter User Code , enter the 4-digit User Code for this user and press the OK icon.	
	9. Press the box next to RF Button Zone (if used); enter the 3-digit RF Button Zone for this user.	
	10. Press the Save icon.	

How to Add an Existing User to a Second Keypad

After adding a user to the first keypad, the same user can be added to a second keypad. From the second keypad go to "User Setup" and enter the same user name and same user code (refer to "How to Add a User" above). The second keypad will automatically update the user information. Press **Save**.

How to Delete a User

ICON	ACTION	NOTES
	1. Select the User you want to delete. 2. Press the DELETE USER icon. 3. Enter your Authorized code. 4. Press the appropriate icon. The Confirm Delete screen is displayed.	Three selections are available: add a user, edit a user, or delete a user. The authorized code for deleting, adding, and editing users is dependent upon the alarm panel you are interfacing with. Check your alarm panel Installation and Setup Guide to determine who can delete, add, and edit users.